



# LEDLENSER HF4R


## HF4R Core

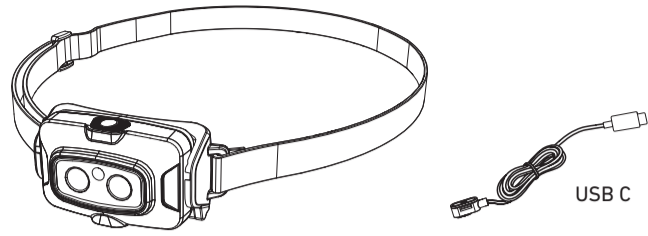


## HF4R Work

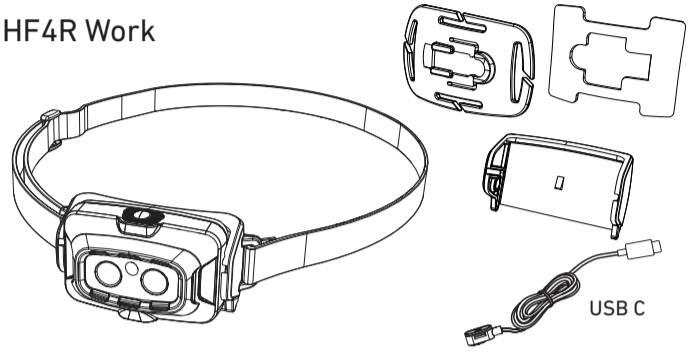


## HF4R Signature

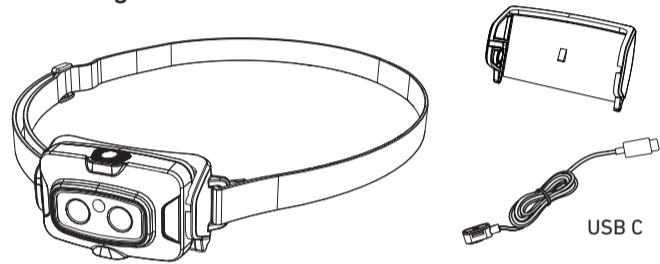


## Magnetic Charge System

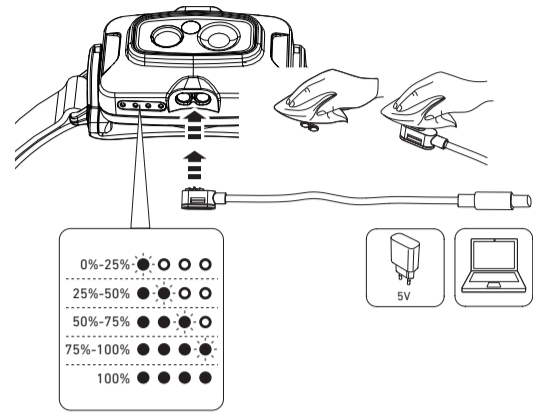


## Battery Indicator

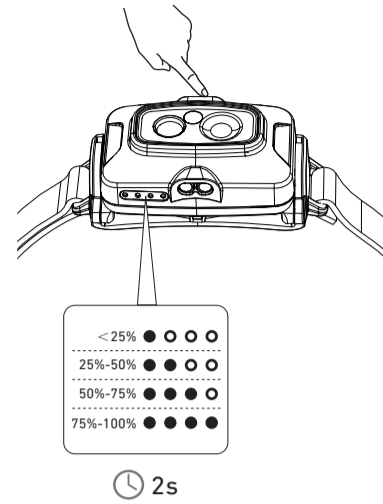


## Low Battery Warning

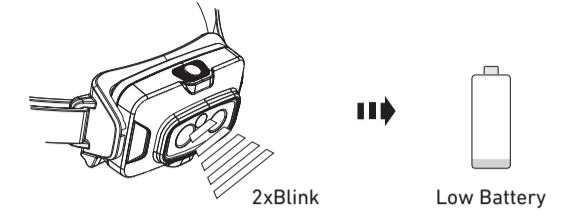


## Boost

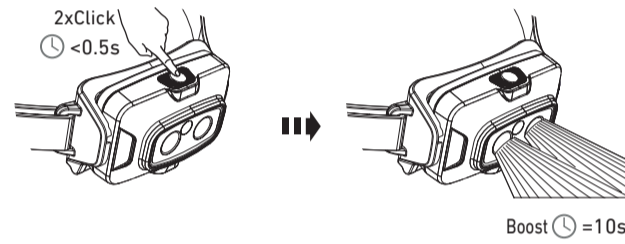


## Boost Overheat Warning

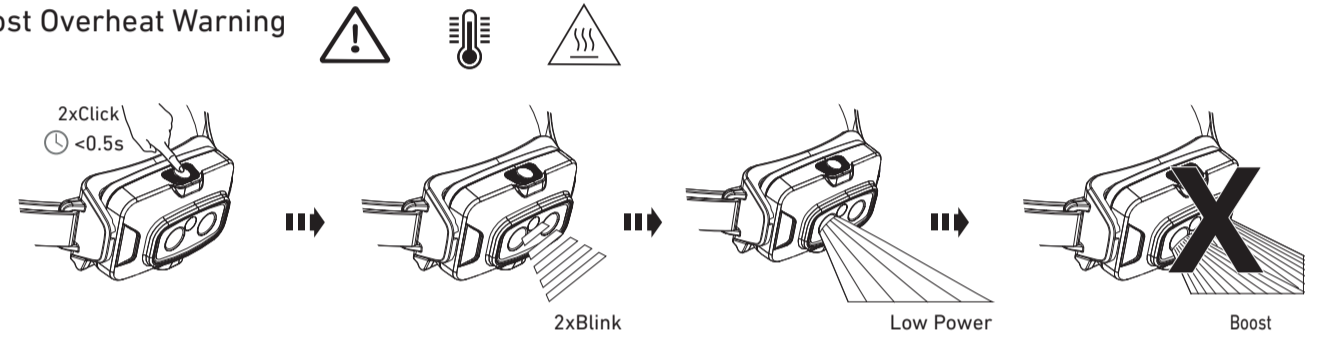


## Transportation Lock

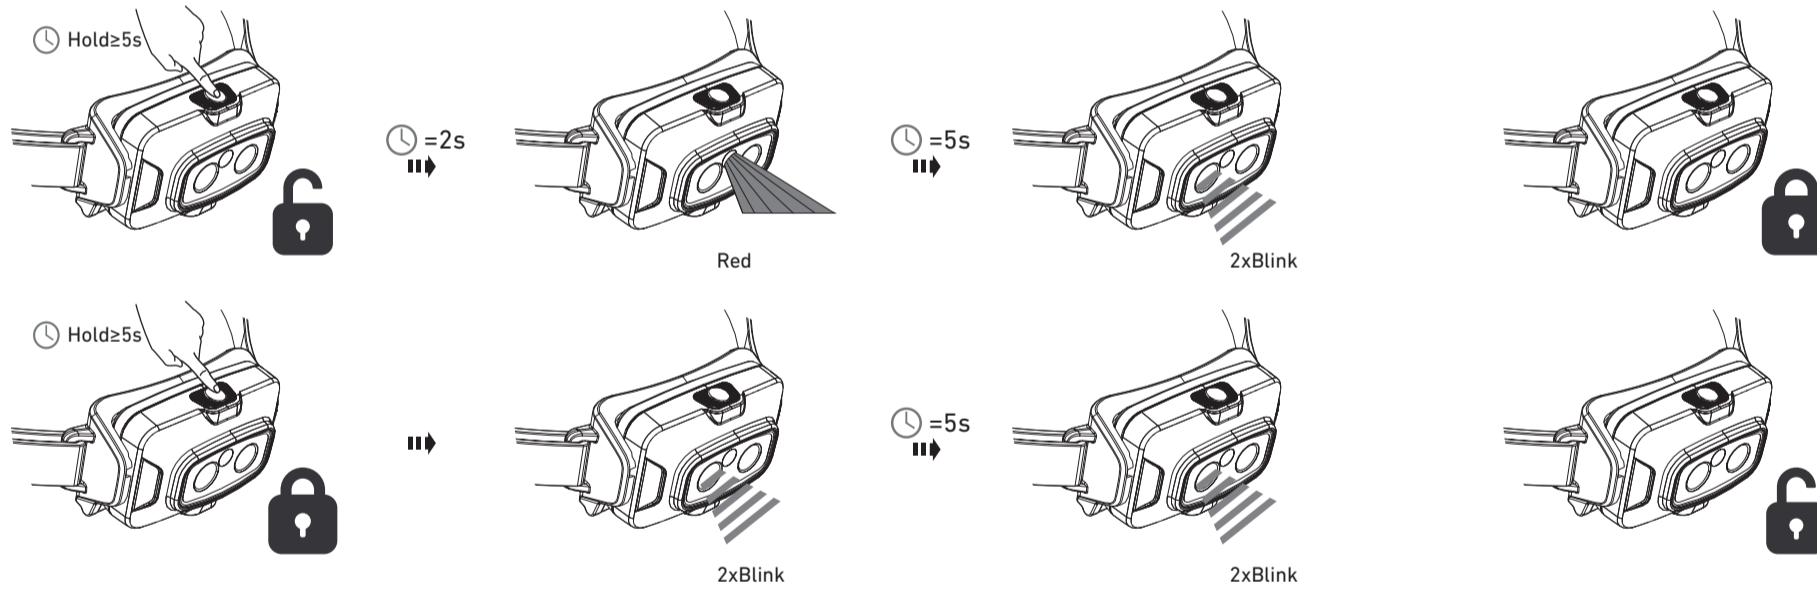



## Lamp Head Rotation

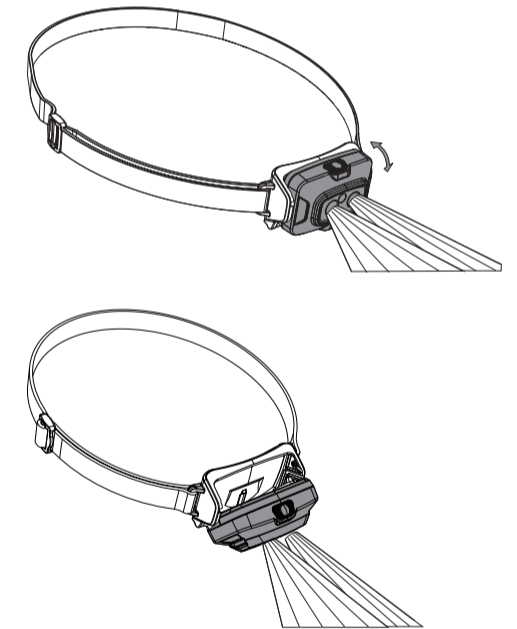

## Connecting System Adapter (HF4R Work/HF4R Signature)

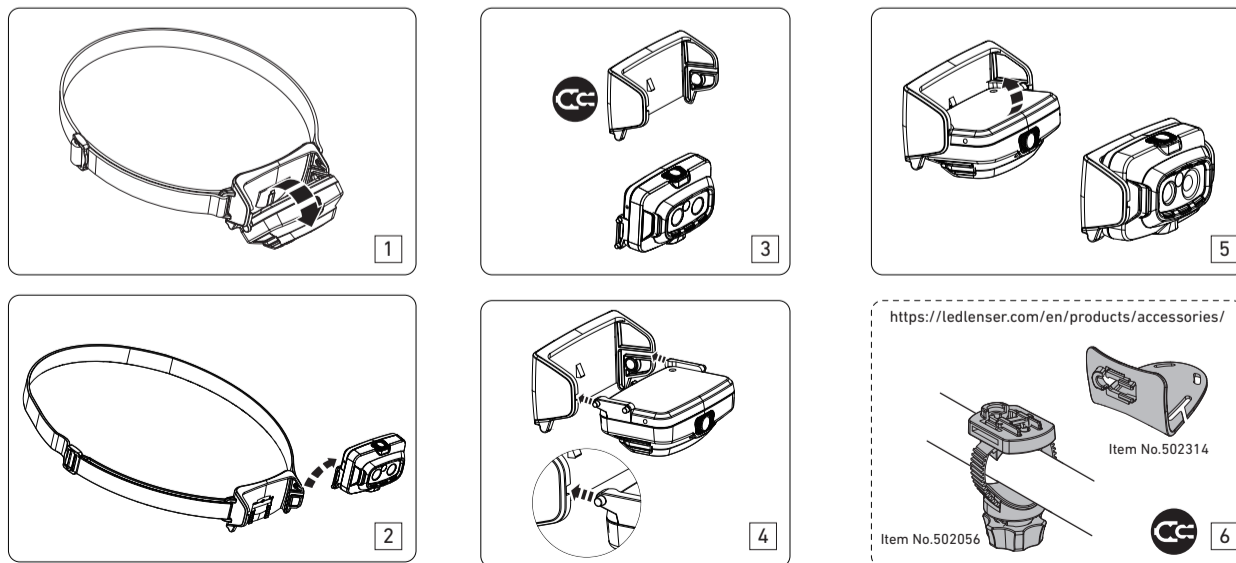


## Helmet Adapter (HF4R Work)

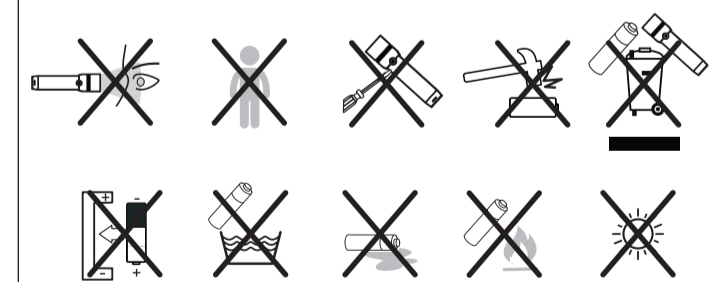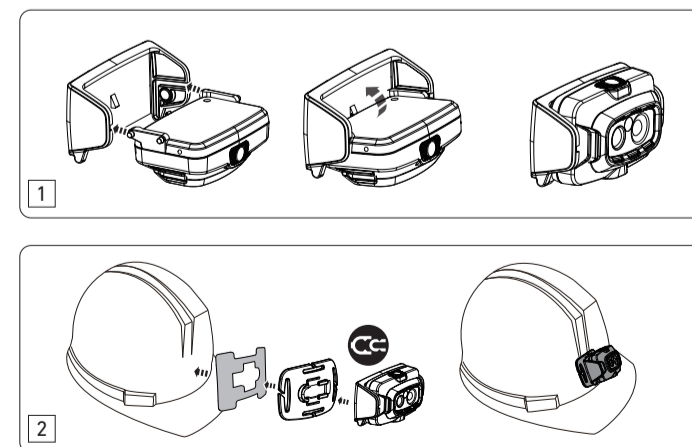


Ledlenser GmbH & Co. KG  
Kronenstrasse 5-7 • 42699 Solingen • Germany  
Phone +49 212/5948-0 Fax +49 212/5948-200  
info@ledlenser.com




HF4R Core/HF4R Work

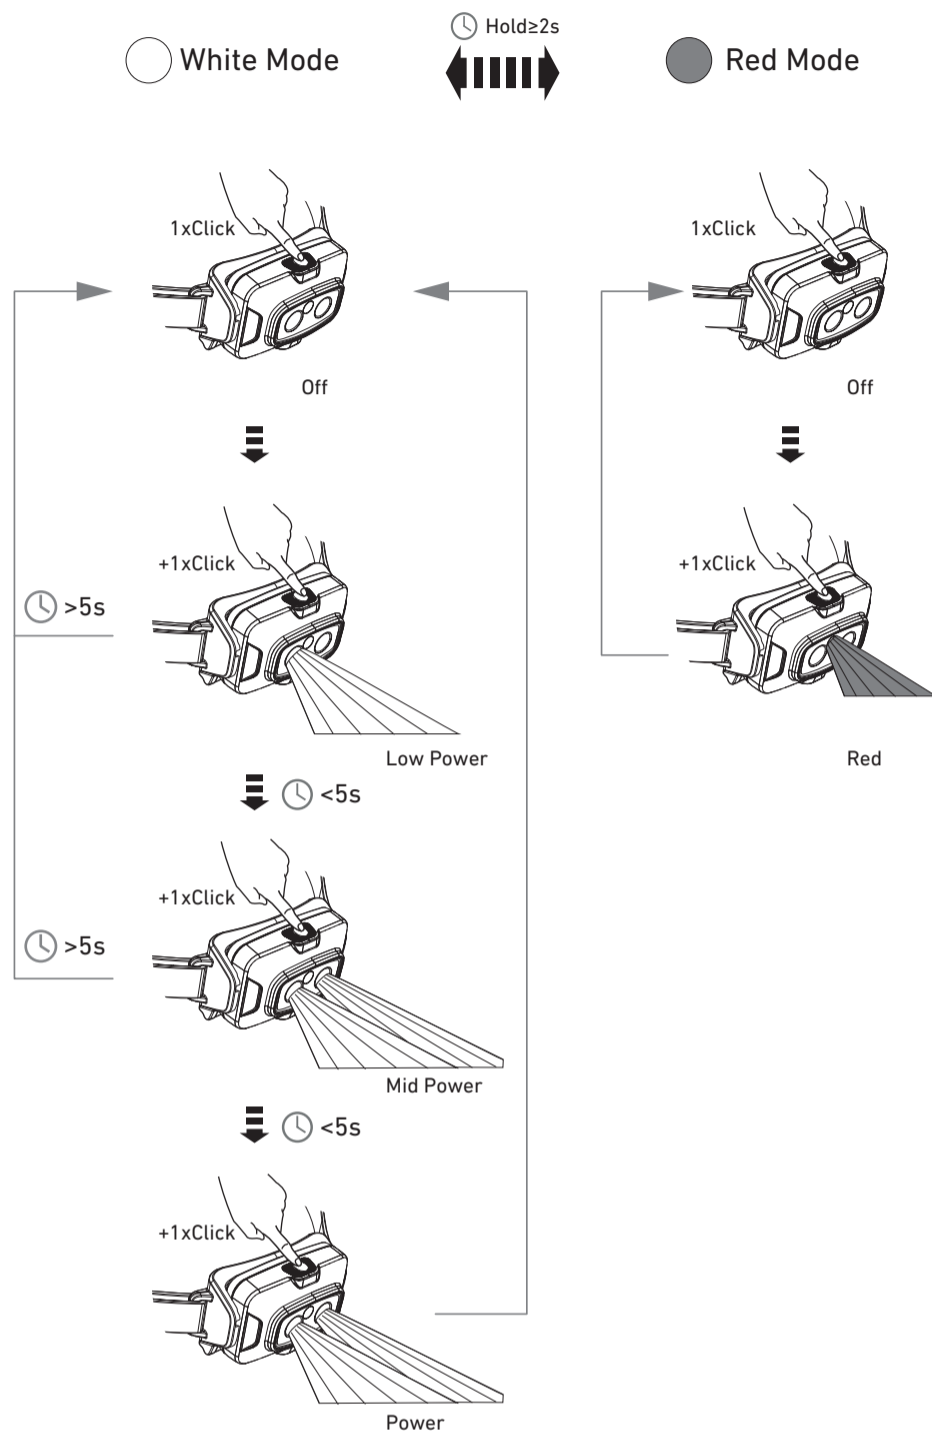

Direct to Red Mode (HF4R Core/HF4R Work)

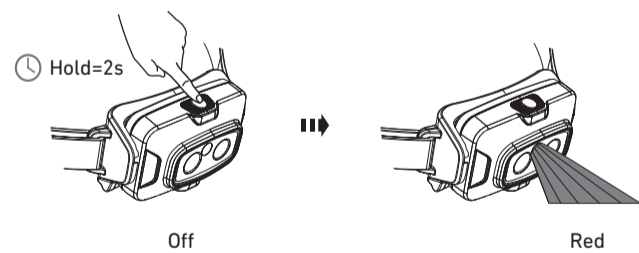

HF4R Signature

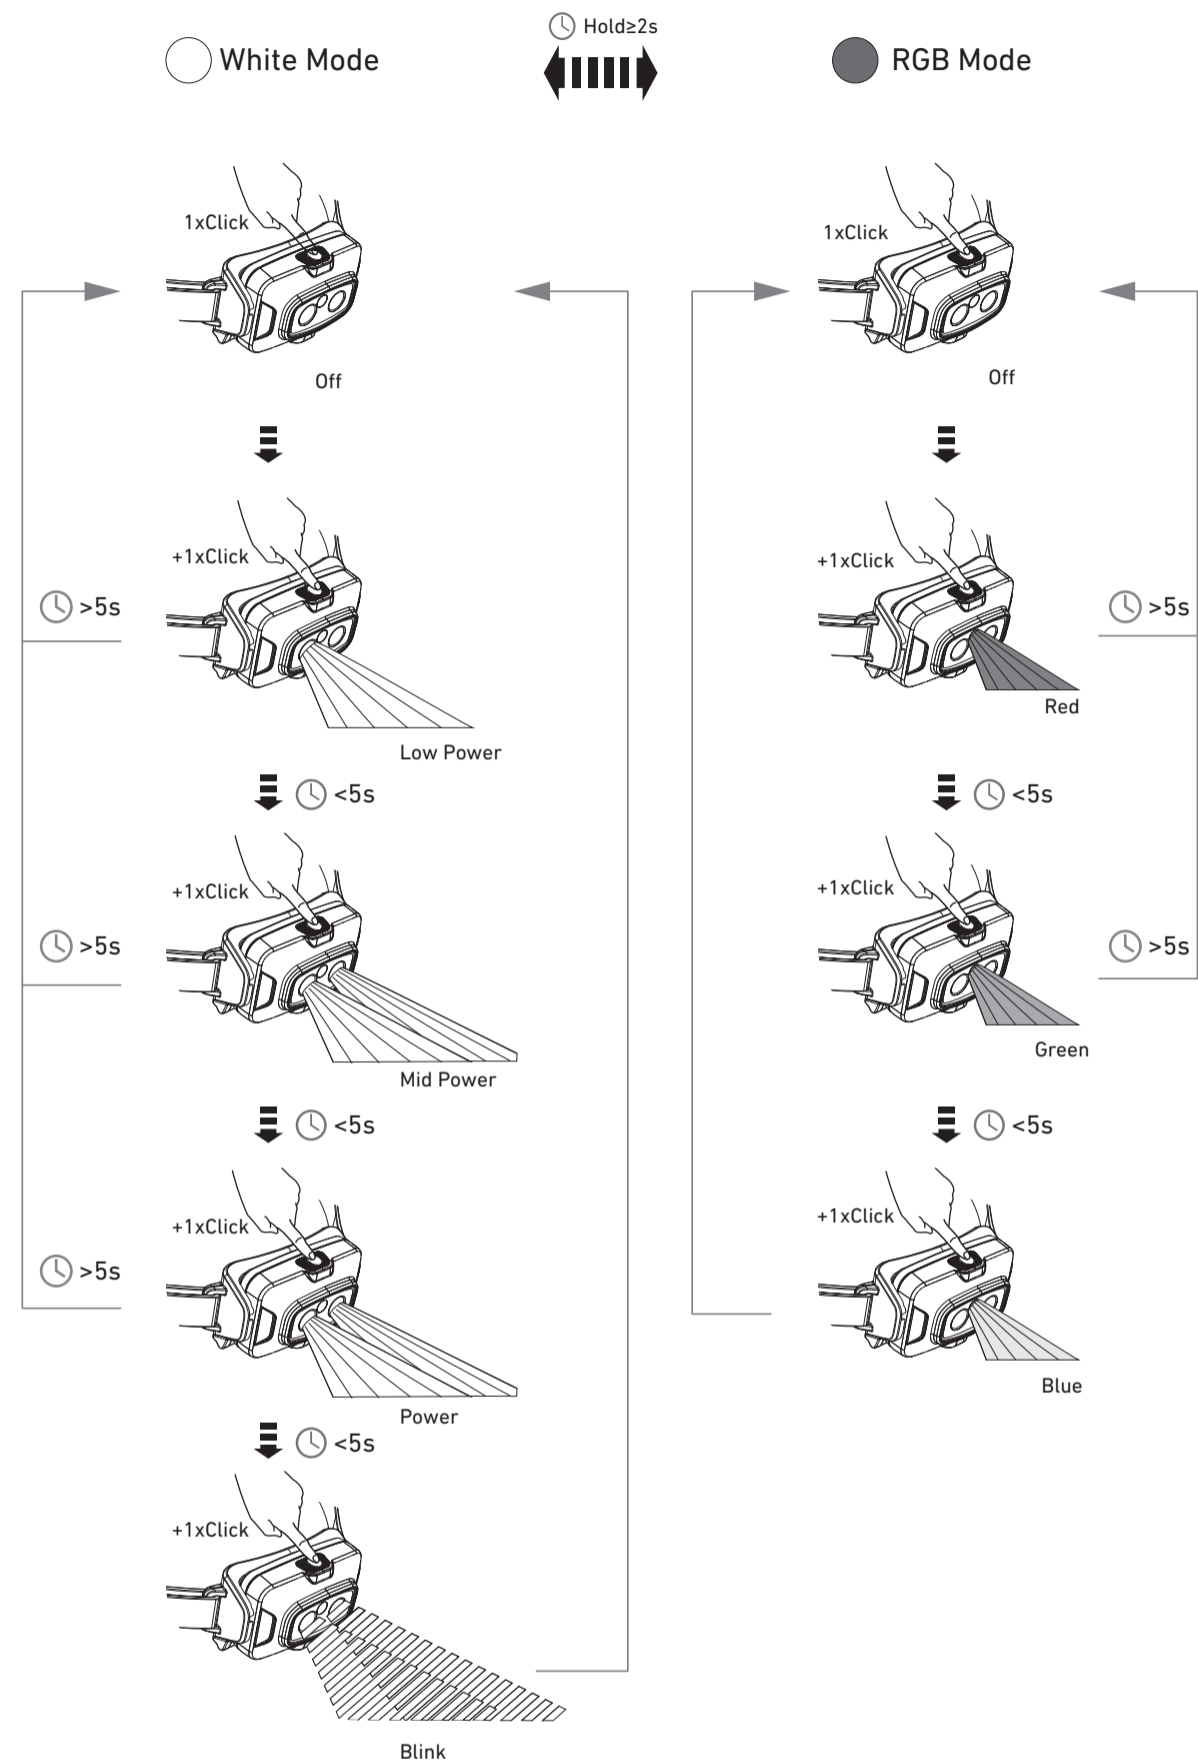

Direct to RGB Mode (HF4R Signature)

